
## **SS - 64** To Icom IC-22S Mobile

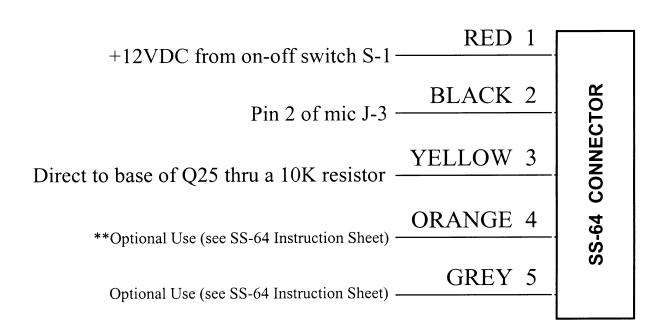

## Notes

If you want the reverse burst function, follow the directions on the SS-64 instruction sheet to install into your radio's push-to-talk.

\*\* The Orange wire <u>must be grounded</u> to encode tone if jumper JP-1 is out

