
SS - 64 To Icom IC-290H Mobile

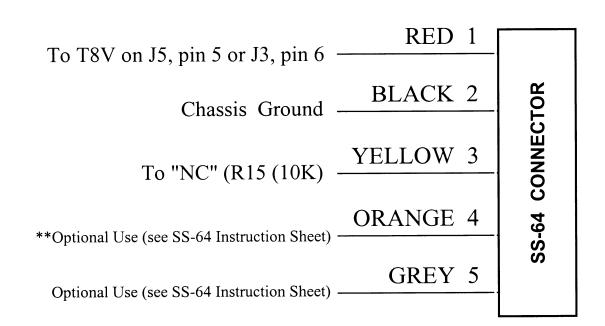

Notes

If you want the reverse burst function, follow the directions on the SS-64 instruction sheet to install into your radio's push-to-talk.

** The Orange wire <u>must be grounded</u> to encode tone if jumper JP-1 is out

