## SS - 64 To Kenwood TR-9000 Mobile

Switched 12 VDC —	RED 1	
Chassis Ground —	BLACK 2	TOR
To junction of VR-2 & C-16	YELLOW 3	CONNECTOR
**Optional Use (see SS-64 Instruction Sheet) —	ORANGE 4	SS-64 C
Optional Use (see SS-64 Instruction Sheet) —	GREY 5	S

## **Notes**

If you want the reverse burst function, follow the directions on the SS-64 instruction sheet to install into your radio's push-to-talk.

\*\* The Orange wire <u>must be grounded</u> to encode tone if jumper JP-1 is out