



Junct. of C78,C77,Pin 3 of Q11 and Pin 1 of active filter socket

+12vdc keyed from relay (where 2 red/white wires are connected)

To switch contact that was not used on tone switch S101 that is grounded when switch is in SUB position. This will allow tone to be sent only when switch is in "SUB" position.

NOTE: The pot on the SS32 should remain all the way up and tone level adjusted with the "Tone Adj." pot VR3 in the unit. VR3 will be all the way up to get +.75kc level. If more tone level is required, connect encoder output to junction of R6 (10k) and R5 (47k) on transmitter board



**Communications Specialists**

426 W. Taft Ave., Orange, CA 92667

(714) 998-3021 (California) / (800) 854-0547