SS - 64 To Kenwood TS-700A Mobile

| "TOB" on FM IF Unit — | RED | 1_ | |
|--|--------|----|-----------|
| Chassis Ground — | BLACK | 2 | CTOR |
| Junction of C23 (1uf), R21 (33K) & R22 (22K) of generator unit (X52-1080-21) | YELLOW | 3 | CONNECTOR |
| **Optional Use (see SS-64 Instruction Sheet) — | ORANGE | 4 | SS-64 C |
| Optional Use (see SS-64 Instruction Sheet) — | GREY | 5 | 88 |

Notes

Unit will send tone when the tone switch on the front panel is on and will send no tone with it off.

If you want the reverse burst function, follow the directions on the SS-64 instruction sheet to install into your radio's push-to-talk.

** The Orange wire <u>must be grounded</u> to encode tone if jumper JP-1 is out

