


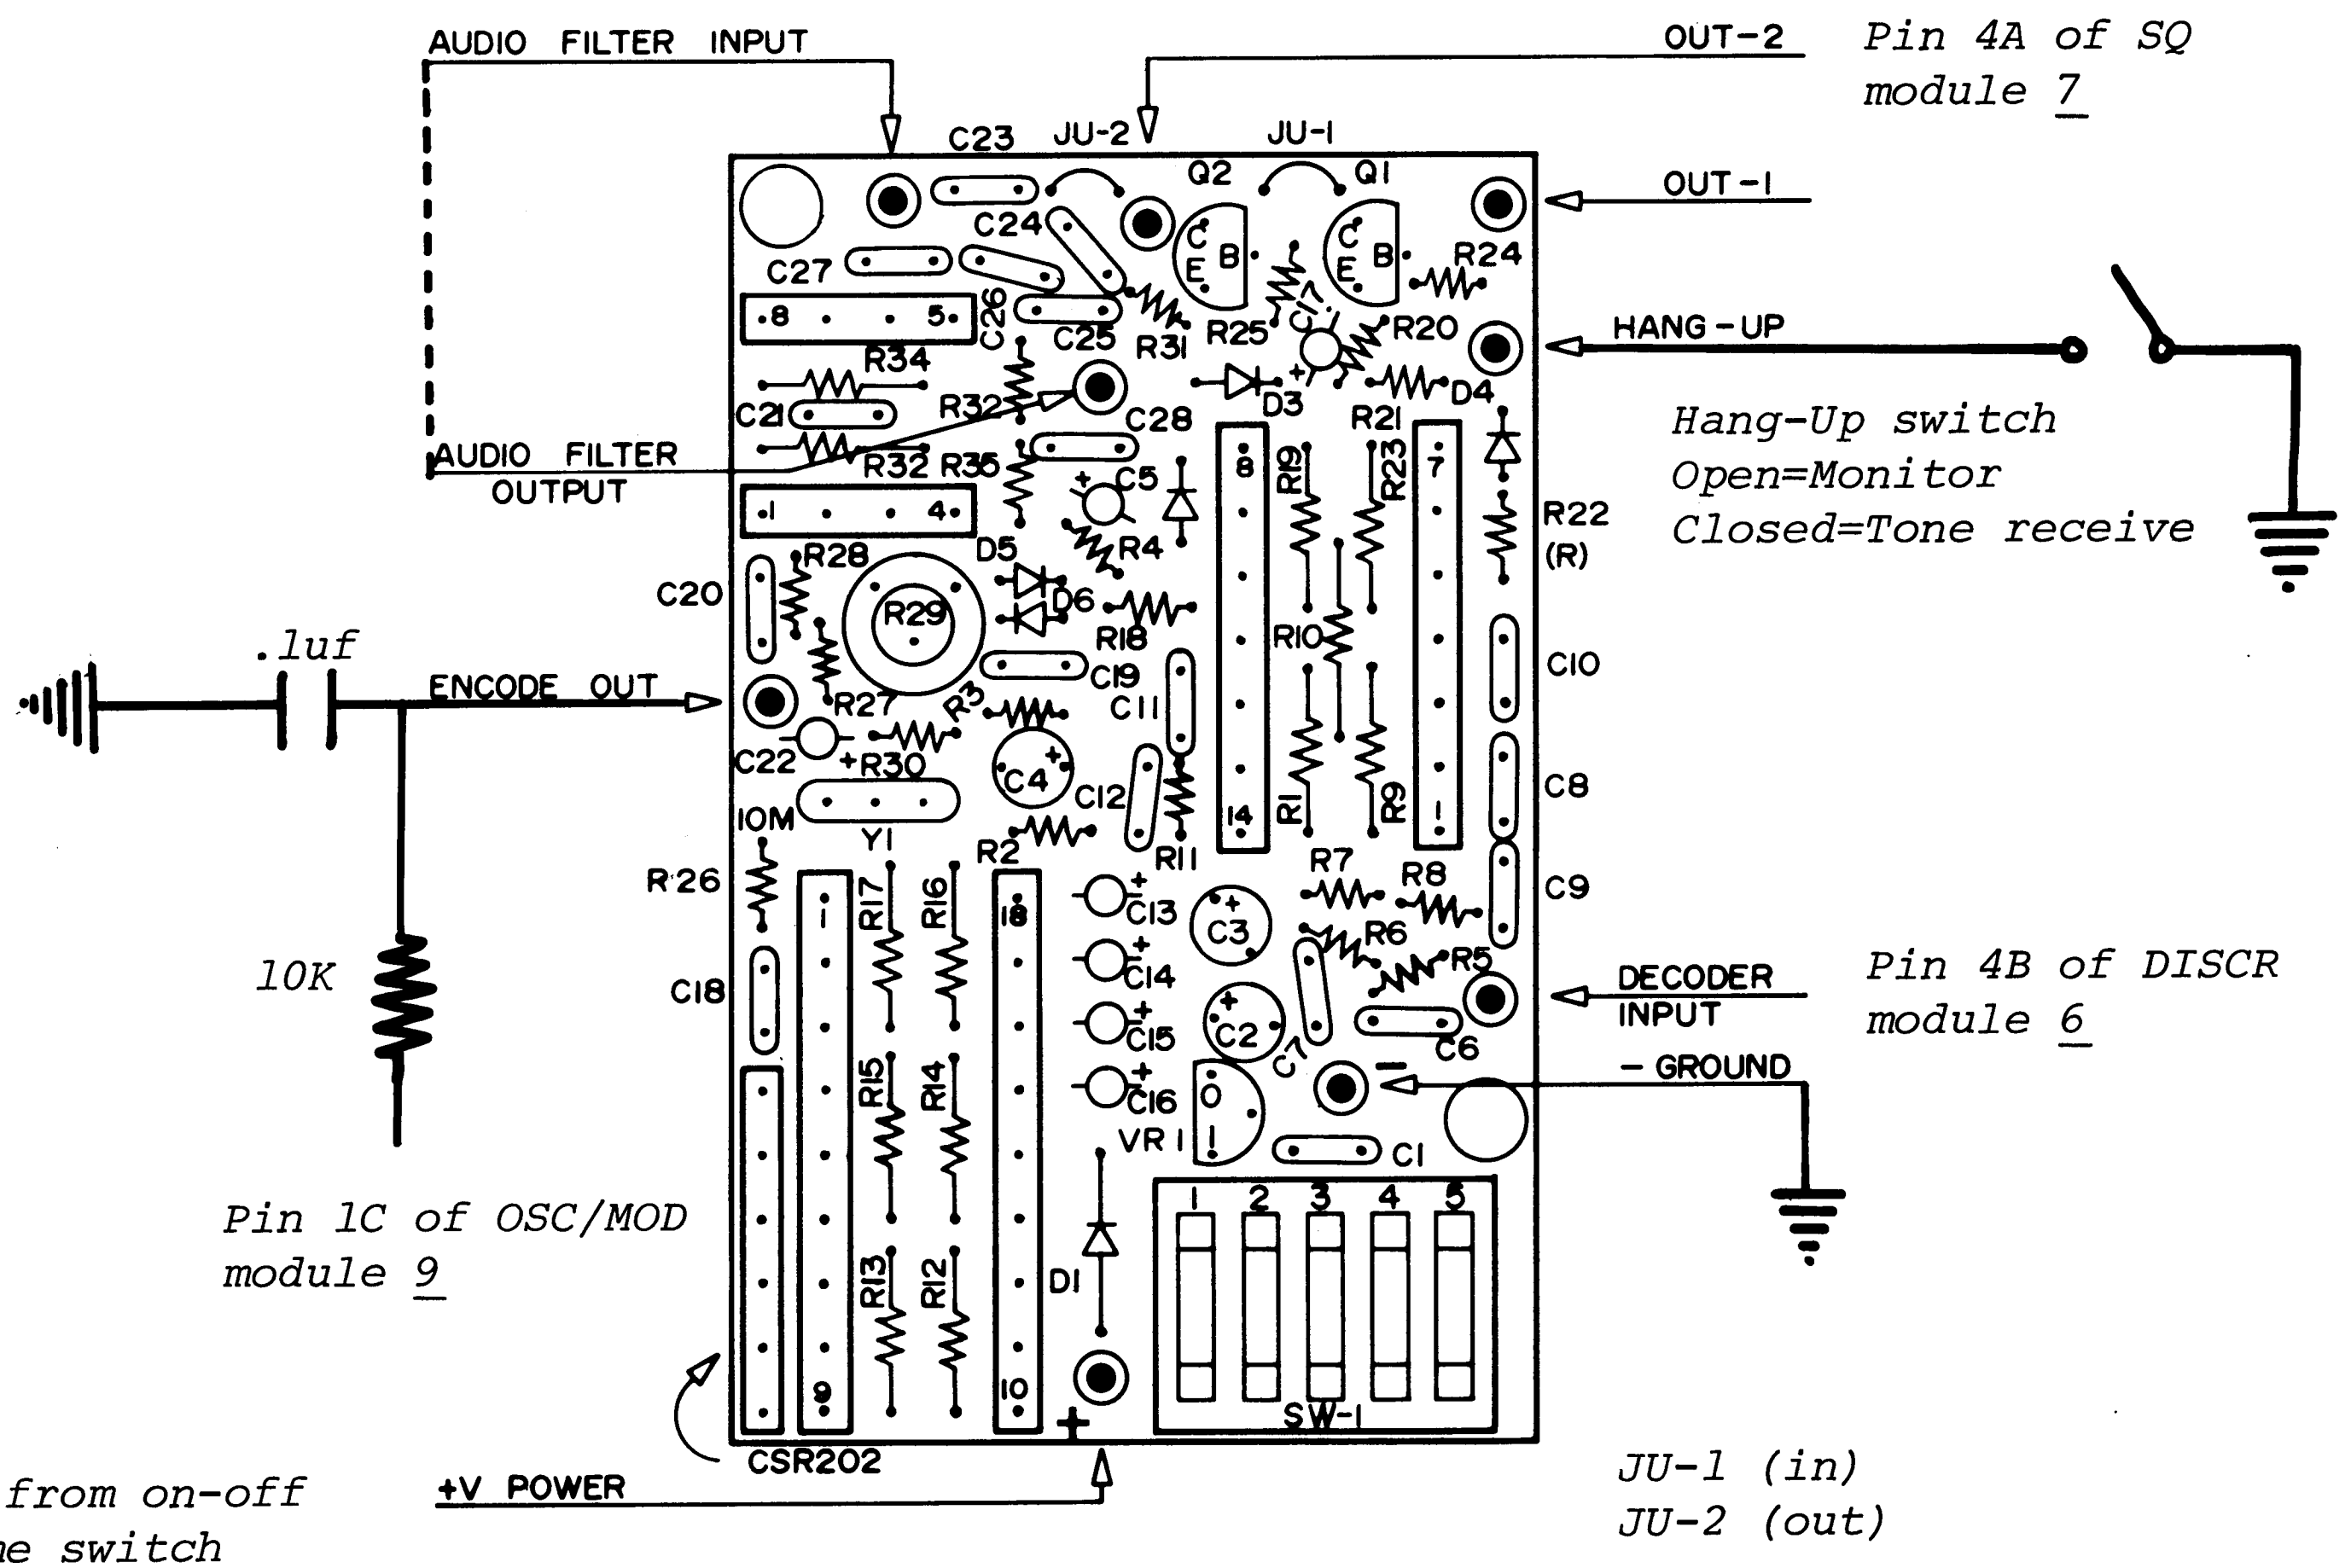

NOTES:


- 1- Relocate 22uf-35V capacitor (C16) if it is the larger size and it is in the way...
- 2- Remove the phone jack and install miniature toggle switch in it's place for monitoring...

APPLICATION PARTS  
(not supplied)

- 1-10k 1/4 resistor  
1-.1uf-12V capacitor  
1- Set hardware & wires

## SPECIAL NOTICE

**WHEN MOUNTING THE TS-32 WITH A 90 DEGREE ANGLE BRACKET AGAINST THE PCB, BE SURE TO USE THE TWO FIBER SPACERS PROVIDED BETWEEN ANGLE BRACKET AND PCB. IF THIS IS NOT DONE, THE BRACKET WILL SHORT OUT FOILS ON THE PCB . . . . .**

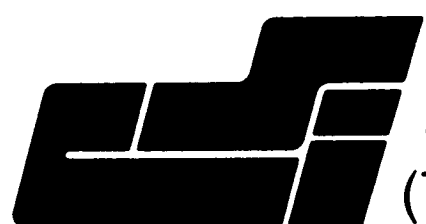

## Communications Specialists

426 W. Taft Ave., Orange, CA 92667  
(714) 998-3021 (California) / (800) 854-0547