


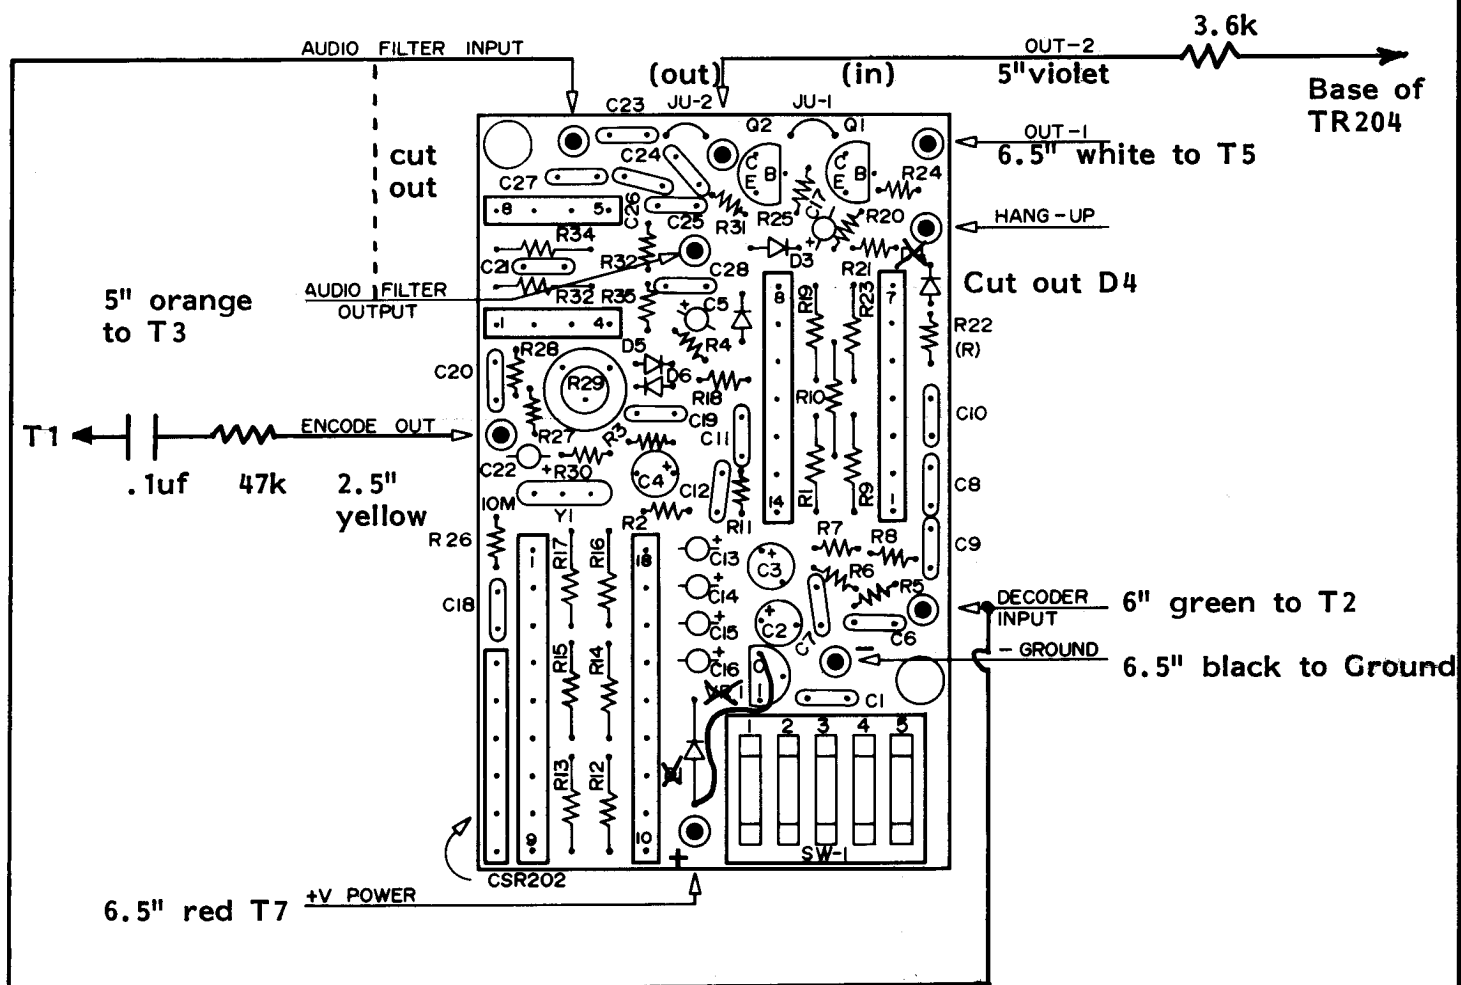

Modification of TS-32 to CTS-3

1. Remove D1 and VR1
2. Jumper +V pin to "O" on VR1
3. Bridge R20 with 120k 1/8w on bottom of PCB
4. Cut out D4
5. Cut out JU-2

Add in package with unit

1. 3.6k 1/8w
2. 47k 1/8w
3. .1uf mono capacitor
4. (4) squares of double sided tape
5. wire bundle
6. freq. labels (2)

NOTE: Set tone deviation, then mod.....

Installation instructions

1. Remove radio jumper from T2 to T3
2. One side of the tone switch must be grounded (T6)
3. Mount unit with 2 squares of double sided tape

SPECIAL NOTICE

WHEN MOUNTING THE TS-32 WITH A 90 DEGREE ANGLE BRACKET AGAINST THE PCB, BE SURE TO USE THE TWO FIBER SPACERS PROVIDED BETWEEN ANGLE BRACKET AND PCB. IF THIS IS NOT DONE, THE BRACKET WILL SHORT OUT FOILS ON THE PCB



Communications Specialists

426 W. Taft Ave., Orange, CA 92667
(714) 998-3021 (California) / (800) 854-0547