


TS-32 to GE PHOENIX

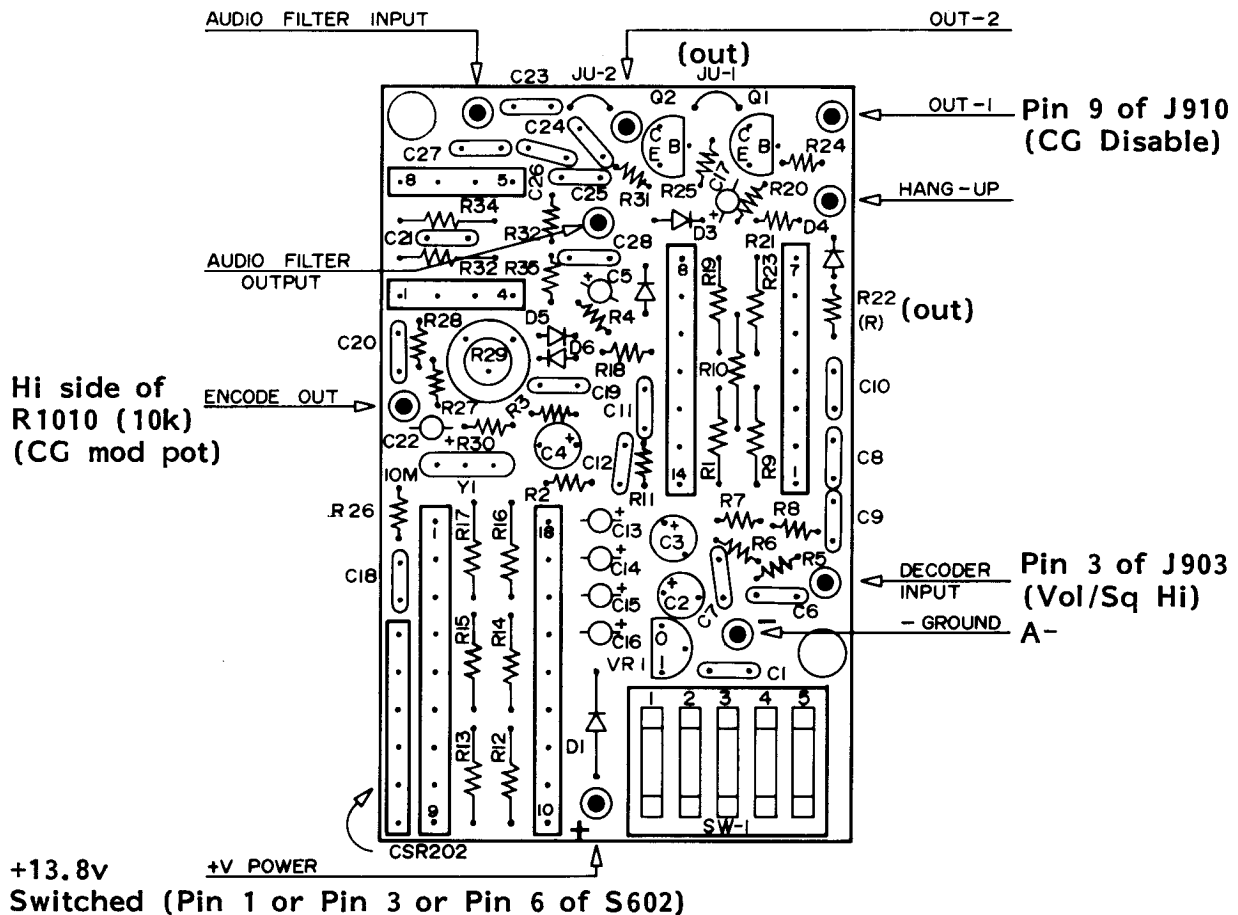

1. Cut out JU-1
2. Cut out R22
3. Mount unit with 2 pieces of double sided tape on front part of IOC Board over cut out.
4. Adjust CG Modulation pot (R1010) and level pot R29 on TS-32 for proper transmit tone level.

PARTS

- 2- Pieces of double sided tape
- 1- Wire bundle

SPECIAL NOTICE

WHEN MOUNTING THE TS-32 WITH A 90 DEGREE ANGLE BRACKET AGAINST THE PCB, BE SURE TO USE THE TWO FIBER SPACERS PROVIDED BETWEEN ANGLE BRACKET AND PCB. IF THIS IS NOT DONE, THE BRACKET WILL SHORT OUT FOILS ON THE PCB



Communications Specialists

426 W. Taft Ave., Orange, CA 92667

(714) 998-3021 (California) / (800) 854-0547