


TS-32 to GE Motorcycle Radio (PE type)

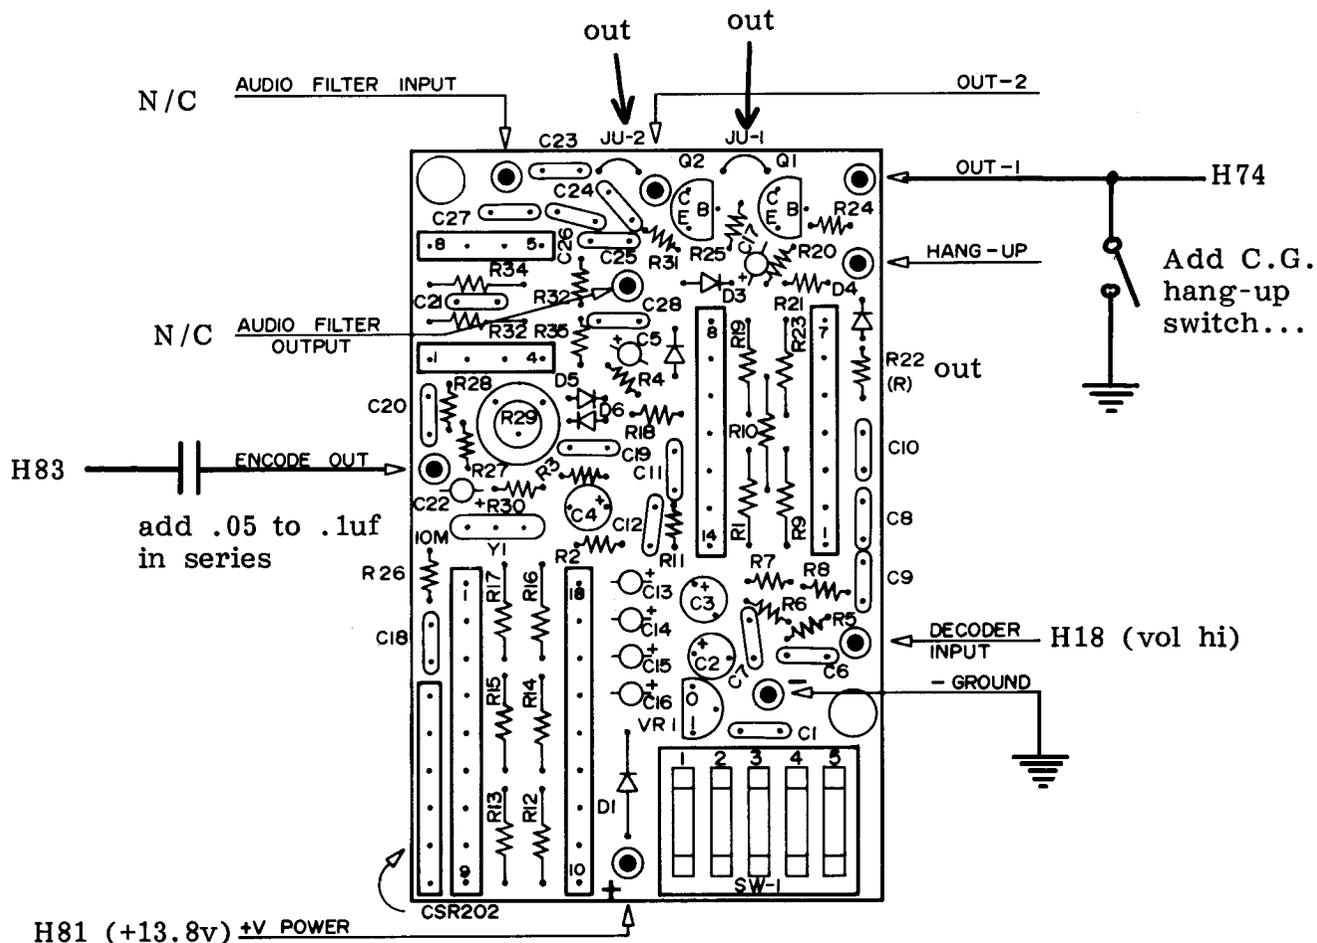

NOTES:

1. Cut out jumper from H1 to H2 in receiver.
2. Cut out R22, JU-1, JU-2 on TS-32.

SPECIAL NOTICE

WHEN MOUNTING THE TS-32 WITH A 90 DEGREE ANGLE BRACKET AGAINST THE PCB, BE SURE TO USE THE TWO FIBER SPACERS PROVIDED BETWEEN ANGLE BRACKET AND PCB. IF THIS IS NOT DONE, THE BRACKET WILL SHORT OUT FOILS ON THE PCB.....



Communications Specialists

426 W. Taft Ave., Orange, CA 92667
 (714) 998-3021 (California) / (800) 854-0547