


SS - 64 To Kenwood TR-7730 Mobile

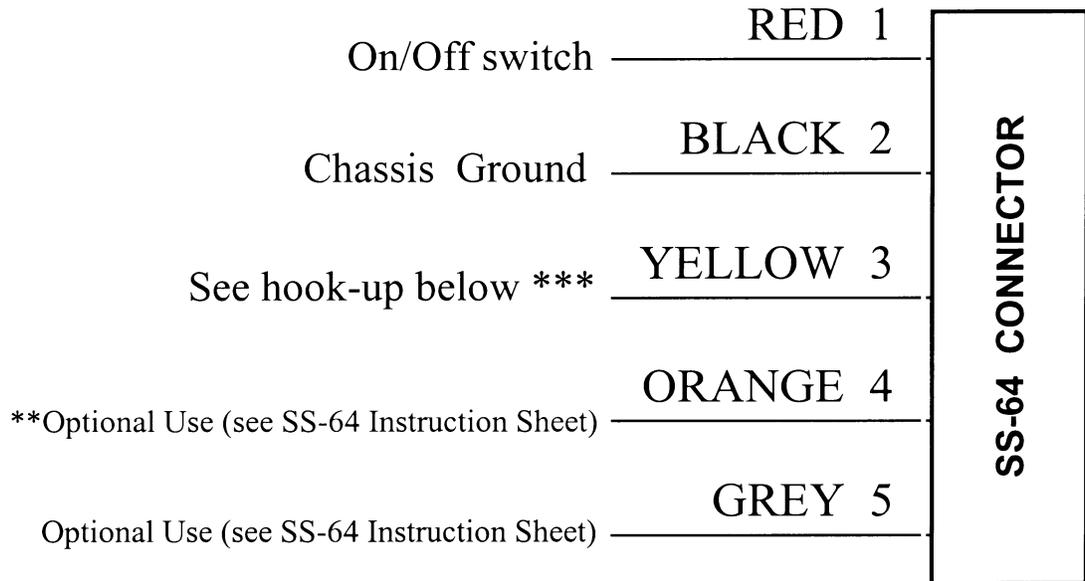

Notes

The extra transistor is needed to mute the encode tone on receive

If you want the reverse burst function, follow the directions on the SS-64 instruction sheet to install into your radio's push-to-talk.

** The Orange wire must be grounded to encode tone if jumper JP-1 is out

