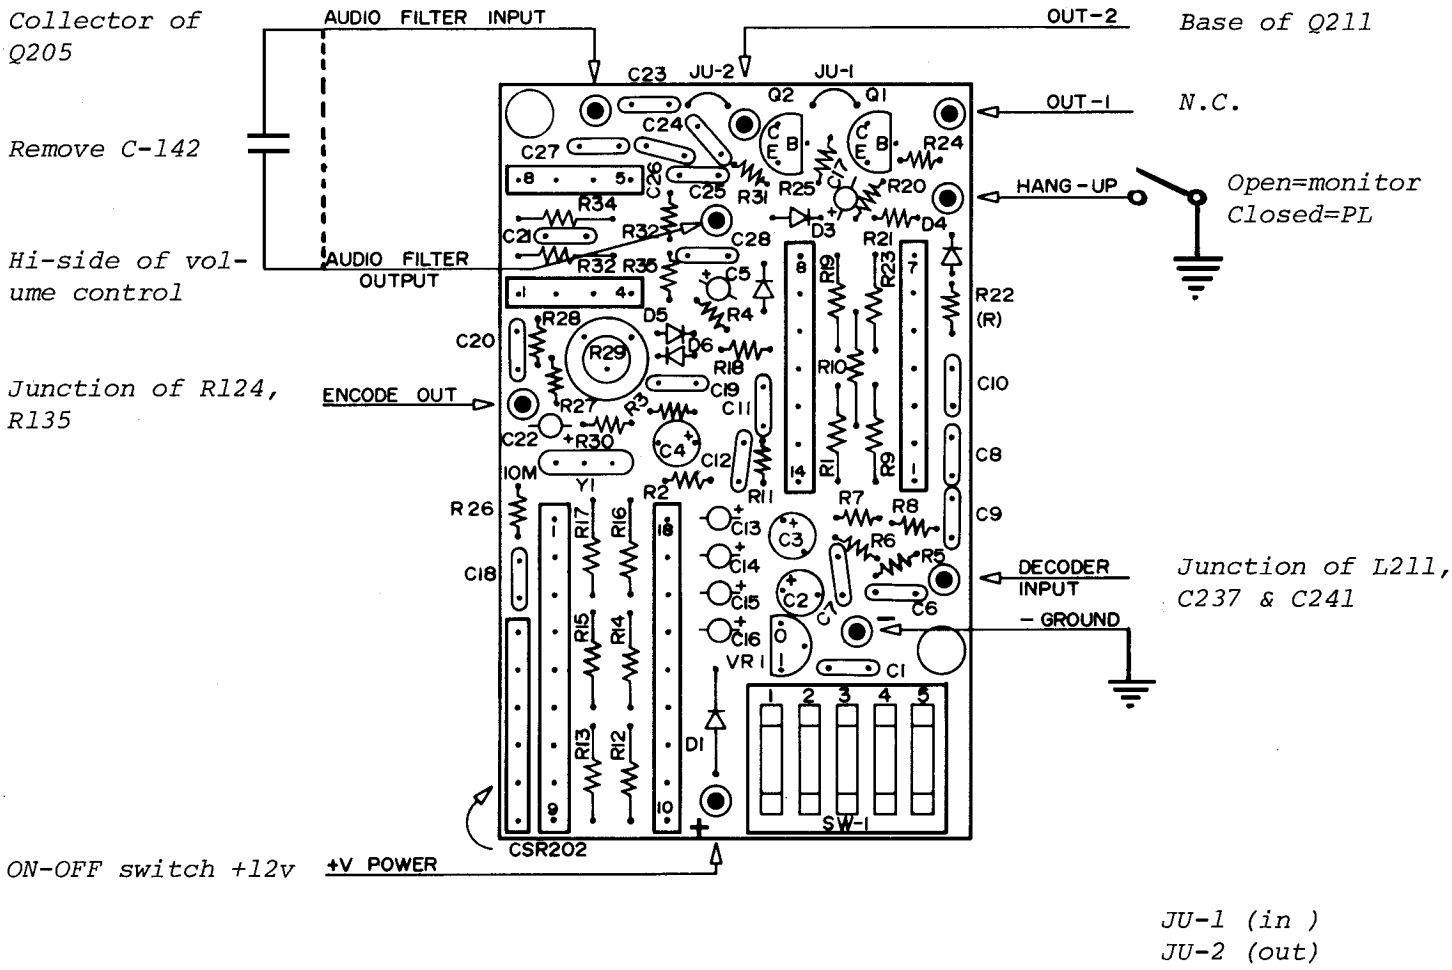

SPECIAL NOTICE

WHEN MOUNTING THE TS-32 WITH A 90 DEGREE ANGLE BRACKET AGAINST THE PCB, BE SURE TO USE THE TWO FIBER SPACERS PROVIDED BETWEEN ANGLE BRACKET AND PCB. IF THIS IS NOT DONE, THE BRACKET WILL SHORT OUT FOILS ON THE PCB . . . . . .

Communications Specialists
426 W. Taft Ave., Orange, CA 92667
(714) 998-3021 (California) / (800) 854-0547